




**CLEAR GAME**  
**Desk / Travel Clock**  
**CG2135C- BU &**  
**CG2135C-SG:**

**Features:**

- Analog Quartz Time with Seconds Hand
- Light
- Alarm
- Date
- AA Battery Required (Not Included)
- One Year Limited Warranty

**Operating Instructions:**

1. Time: Pull the alarm/time knob out and turn counter clockwise until you reach the desired time. Push back in the alarm/time knob.
2. Alarm: Turn the alarm/time setting knob counter clockwise until you reach the desired alarm time.
3. Date: Turn the date knob clockwise until the correct date is shown. The date will change every 24 hours.
4. ON/OFF Switch: Move the switch to the "ON" position to activate the alarm. Move the switch to the "OFF" position to deactivate the alarm. There is no snooze feature.

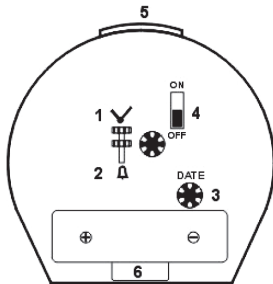

5. Light Button: Push and hold the light button to turn on the light.
6. Battery Installation: Insert one AA battery by matching correct polarity "+" and "-" inside battery compartment. Battery Not Included.

CLEAR GAME  
 ONE YEAR LIMITED WARRANTY  
 IMPORTERS SERVICE CERTIFICATE  
 CG2135C-BU & CG2135C-SG

Clear Game warranties that it will repair any failure due to defects in materials and/or workmanship free of charge for up to one year from purchase date. **This warranty is by Clear Game, not by the dealer from whom it was purchased.** Clear Game reserves the right to replace any or all inside components in lieu of repair or replace with another similar model of equal value. This warranty does not cover any failure to function properly due to abuse, accidents or misuse. This warranty gives you specific legal rights which may vary from state to state. If your clock needs service, package it carefully and securely in a mailing carton.

Send via prepaid insured Parcel Post to:

Clear Game  
 C/O DHL Danzas  
 500 E. Dallas Road  
 Grapevine, Texas 76051

Please include a brief note explaining the problem. Be sure to print your name and address clearly.

[www.cleargameoutdoors.com](http://www.cleargameoutdoors.com)

