

**CLEAR GAME**  
**Digital Wall or Table Clock**  
**CG2252-HG &**  
**CG2252-M4:**

**Features:**

- Wall Clock or Table Clock (Hang or Stand)
- Digital Time (12 hour or 24 hour)
- Alarm
- Calendar
- Temperature in °F or °C
- Hourly Chime

**Button definitions:**

1. SET: Select time setting mode.
2. UP: Setting by counting up.
3. DOWN: Setting by counting down.
4. C/F: Convert temperature to °F or °C.
5. 12/24: Convert time to either 12 hour or 24 hour mode.
6. TIME / ALM: Select to set time or set alarm.
7. Alarm / Sound Modes:
  - A. ALM setting: Will sound for 30 minutes before turning itself off.
  - B. SNOOZE setting: Will snooze for 5 minutes after alarm is muted; repeats up to 30 minutes.
  - C. 24 Hourly Chime: 24 hour chime (each hour)
  - D. 16 Hourly Chime: 16 hour chime (6AM – 9 PM)
  - E. Off

**Operating Instructions:**

[Normal Time Mode]

LCD displays: Time, Month / Day, Day of week, Temperature.

[Set Time Mode]

Move TIME / ALM button switch to TIME and press SET button to set the correct time. Press the UP or DOWN buttons to change the selected setting. Repeated pressing of SET button will move through the different time settings:

Set Hour → Set Minute → Set Year → Set Month → Set Day → Normal Time Mode

[Set Alarm Mode]

Move TIME / ALM switch to ALM position to set the alarm. Press the UP or DOWN buttons to change the selected setting. Move ALM position back to TIME when alarm setting is complete.

Set Hour → Set Minute → Set Year → Set Month → Set Day → Normal Time Mode

When alarm sounds:

To turn off alarm, press any button. Alarm will sound for 30 minutes and then automatically turn off, if no button is pressed.  
**Snooze:** When alarm is set on the snooze mode and alarm sounds, press any button to turn off the alarm. The alarm will be muted for 5 minutes and then sound again. Alarm will keep sounding for up to 30 minutes and then automatically turn off. To turn off the alarm-snooze, move the ALM or SNOOZE button to OFF.

[Set Hourly Chime Mode]

16: Sets the hourly chime to sound at the beginning of each hour from 6 AM until 9 PM (16 hours). To turn off the 16 hourly chime mode, move the 16 button to OFF.

24: Sets the hourly chime to sound at the beginning of each hour (24 hours). To turn off the 24 hourly chime mode, move 24 button to OFF.

When hourly chime mode is selected, the LCD will display “♪”.

**Battery Installation:**


Remove battery cover from back of clock. Insert two AA batteries by matching correct polarities “+” and “-” inside battery compartment. Batteries Not Included.

**Notes:**

1. Press C/F button to convert temperature to °F or °C.
2. Temperature is detected every minute.
3. While setting the time, if no buttons are pressed within one minute, the clock will return to normal time mode.
4. While setting the alarm, the alarm mode will remain in the alarm setting mode until manually switched to time mode.

**Clock Care:**

1. Avoid exposing the clock to extreme temperature, water or severe shock.
2. Avoid contact with any kind of corrosive materials, such as cleaning agents, alcohol, perfume, etc.

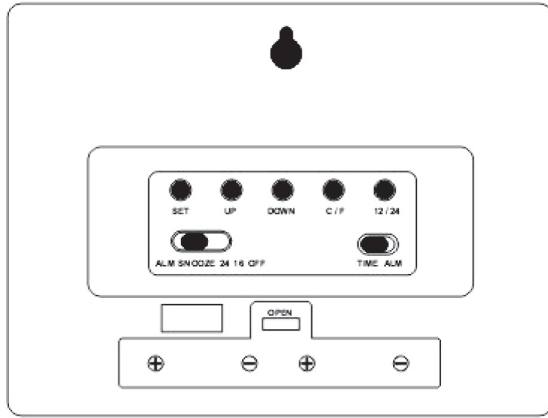

**CLEAR GAME**  
**ONE YEAR LIMITED WARRANTY**  
**IMPORTERS SERVICE CERTIFICATE**

CG2252-HG & CG2252-M4

Clear Game warranties that it will repair any failure due to defects in materials and/or workmanship free of charge for up to one year from purchase date. **This warranty is by Clear Game, not by the dealer from whom it was purchased.** Clear Game reserves the right to replace any or all inside components in lieu of repair or replace with another similar model of equal value. This warranty does not cover any failure to function properly due to abuse, accidents or misuse. If your clock needs service, package it carefully and securely in a mailing carton.

Send via prepaid insured Parcel Post to:

Clear Game  
 C/O DHL Danzas  
 500 E. Dallas Road  
 Grapevine, Texas 76051

Please include a brief note explaining the problem. Be sure to print your name and address clearly. **Enclose \$6.95 to Clear Game, to cover the cost of return packing, postage, insurance and handling.**

**\*\* Do not send cash or checks. Only money orders, Master Card or Visa are accepted.\*\***

Your name: \_\_\_\_\_

Address: \_\_\_\_\_

City, State, Zip: \_\_\_\_\_

Name of store: \_\_\_\_\_

Store address: \_\_\_\_\_

Date of purchase: \_\_\_\_\_

(include sales receipt if available)

Card Holder Name: \_\_\_\_\_

M.C. \_\_\_\_\_ Visa \_\_\_\_\_

Account Number: \_\_\_\_\_

Expiration Date: \_\_\_\_\_

www.cleargameoutdoors.com