


CLEAR GAME SPORTS WATCH CG820

Features:

1. Mossy Oak's New Break Up or Shadow Grass camo pattern.
2. Each camo pattern applied different on every watch – No Two Alike.
3. Water Resistant to 10 meters (33 feet).
4. Shock Resistant
5. Electroluminescent (EL) Backlight
6. Alarm
7. Stopwatch / Chronograph
8. Casing made of ABS plastic and band made of PU plastic.
9. Time display of 12 hour (standard time) or 24 hour (military time).
10. Day and Date
11. Battery Life will last between 12 and 24 months, depending on backlight use.

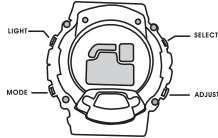

CG820

Operating Instructions:

1. LIGHT Button:

Press the LIGHT button to turn on watch EL backlight. The light will continue for about 3 seconds and then automatically turn off.

2. MODE button:

From normal display, this button will go through the display modes:

Normal → Stopwatch / Chronograph → Alarm Set → Time Set → Normal

3. Stop Watch / Chronograph:

From Normal display press the MODE button.

Display will show "00:0000", if not already counting.

Press the "SELECT" button to start the stopwatch.

Press the "SELECT" button again to stop the stopwatch.

Press the "ADJUST" button to reset the stopwatch to "00:0000".

Note: If the stopwatch is counting, press the "ADJUST" button once to stop the counting, although the counter will continue. Press the "ADJUST" button again to return to the continuing counter.

4. Alarm Set:

From Normal display, press the MODE button twice (2 times) to set the Alarm. Hour setting will blink indicating it is ready to change. Press the "SELECT" button to change the hour time setting. Press the "ADJUST" button to switch to the minute time setting. Press the "SELECT" button to change the minute time setting.

"A" indicates AM, "P" indicates PM, "H" indicates 24 hour time .

When alarm sounds, it will last about one (1) minute.

To turn off alarm, press the "SELECT" button or "ADJUST" button.

From normal display mode, you can press and hold the "ADJUST" button and the "SELECT" button to turn on and off the alarm. The alarm 'on' indicator will show a picture of a bell on the watch face.

From the Normal display, press the "ADJUST" button to show the alarm time.

5. Time Set:

From Normal display, press the MODE button three times (3) to set the time. Press the "ADJUST" button to switch between and change the following:

Seconds → Minutes → Hours → Date Day → Date Month → Day of Week

As selection is blinking, press the "SELECT" button to change. Press the "SELECT" button as many times as needed to reach desired time. Press the "ADJUST" button to set your time selection and proceed to the other time and date settings. Once finished setting the time and date, press the "MODE" button to return to normal display.

12 or 24 hour time setting:

While setting the hour time, press the "SELECT" button until you see the "H" or "A" or "P" shown in the seconds counter box. The "H" indicates 24 hour time . The "A" indicating AM or "P" indicating PM shows 12 hour time.

From the Normal display, pressing the "SELECT" button will show the date. The MODE button will always return to the normal display.

NOTE: WATER RESISTANT-DO NOT PRESS BUTTONS WHILE WATCH IS IN WATER.

Display Examples:



Normal Display



Mini Display



Alarm Display



Hours Display



Date, Weekly Display

**CLEAR GAME SPORTS WATCH
ONE YEAR LIMITED WARRANTY
IMPORTERS SERVICE CERTIFICATE**

Clear Game warranties that it will repair any failure due to defects in materials and/or workmanship free of charge for up to one year from purchase date. **This warranty is by Clear Game, not by the dealer from whom it was purchased.** This limited warranty does not cover replacement of lens or crystal, battery, band, strap or case. Clear Game reserves the right to replace any or all inside components in lieu of repair or replace with another similar model of equal value. This warranty does not cover any failure to function properly due to misuse such as water immersion or severe shock. If your watch needs service, package it carefully and securely in a mailing carton. Send as freight prepaid via insured parcel post to:

Clear Game
C/O DHL Danzas
500 E. Dallas Road
Grapevine, Texas 76051

Please include a brief note explaining the problem. Be sure to print your name and address clearly.

Enclose \$5.95 to Clear Game, to cover the cost of return packing, postage, insurance and handling.

**** Do not send cash or checks. Only money orders, Master Card or Visa are accepted. ****

Your name: _____

Address: _____

City, State, Zip: _____

Name of store: _____

Store address: _____

Date of purchase:
(include sales receipt if available)

Card Holder Name: _____

M.C. _____ Visa _____

Account Number: _____

Expiration Date: _____